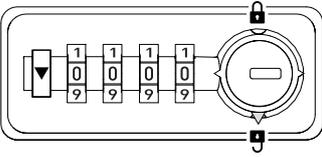
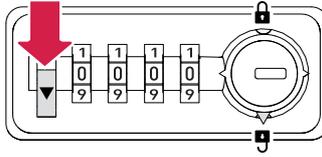
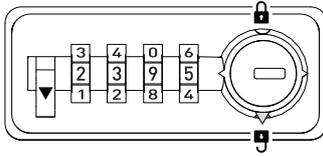
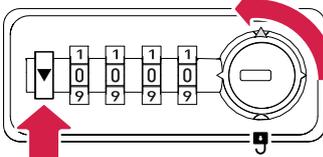
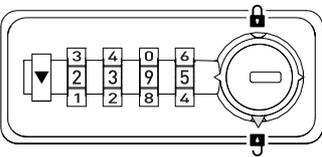
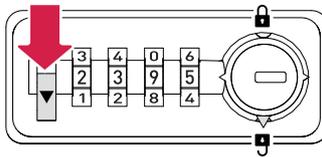
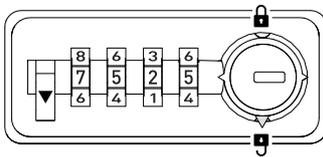
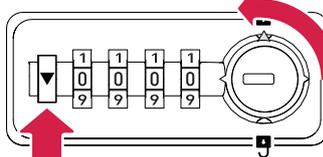






**SETTING THE USER CODE**

<p>1</p>  <p>Initial situation. All digits set to "0", lock is open.</p>	<p>2</p>  <p>Move the programming switch in direction of the arrow until it engages.</p>	<p>3</p>  <p>Set your personal code and make a note of your personal code.</p>	<p>4</p>  <p>4.1 Move the programming switch to the initial position. 4.2 Close the lock, code scrambled 4.3 The personal code is saved.</p>
--	---	--	---




**CHANGING THE USER CODE**

<p>1</p>  <p>Set valid user code.</p>	<p>2</p>  <p>Move the programming switch in direction of the arrow.</p>	<p>3</p>  <p>Set new user code and make a note of your personal code.</p>	<p>4</p>  <p>4.1 Move the programming switch to the initial position. 4.2 Close the lock, code scrambled 4.3 The personal code is saved.</p>
---	--	---	---

**EMERGENCY OPENING WITHOUT CODE RESET**
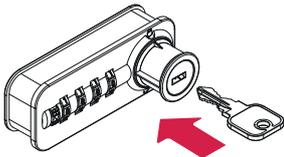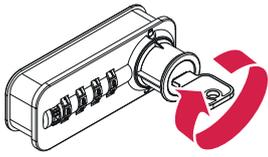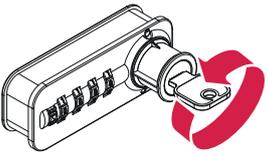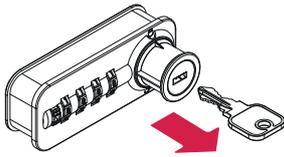
<p>1</p>  <p>Insert the emergency key. Available from the building management.</p>	<p>2</p> <p><b>OPEN LOCK</b></p>  <p>2.1 Turn the key 180° to the right. 2.2 Turn the knob 180° to the right. Lock is open.</p>	<p>3</p> <p><b>CLOSE LOCK</b></p>  <p>3.1 Turn the knob 180° to the left. 3.2 Turn the key 180° to the left</p>	<p>4</p>  <p>Remove the emergency key. Lock is closed again. The access code remains</p>
--	--	---	---

**FINDING UNKNOWN CODE**
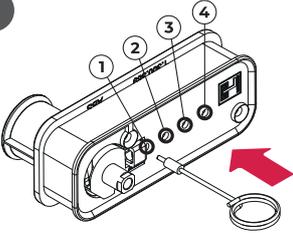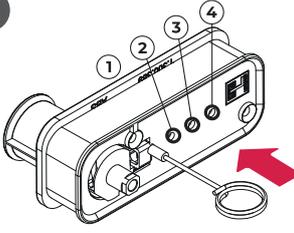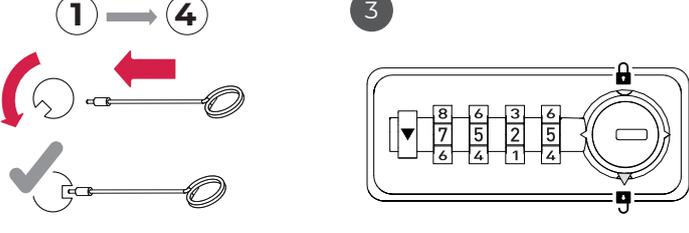
<p>1</p>  <p>Insert finder needle in finder hole no. 1.</p>	<p>2</p>  <p>Press slightly down on the finder needle and turn number wheel at the same time until you can feel the finder needle engaging. Repeat the procedure with number wheels 2-4..</p>	<p>3</p>  <p>Make a note of the code given. Perform a functional check afterwards. The lock can be used and programmed again.</p>
---	--	---